




INSTALL NEW WALL TO EXISTING STRUCTURE ABOVE. REMOVE HISTORIC TIN CROWN MOLDING AND REINSTALL IN FRONT OF NEW WALL. NEW WALL DEPTH SHALL COORDINATE WITH NEW PLUMBING FROM SECOND FLOOR JOISTS ABOVE. RE: MEP DRAWINGS.

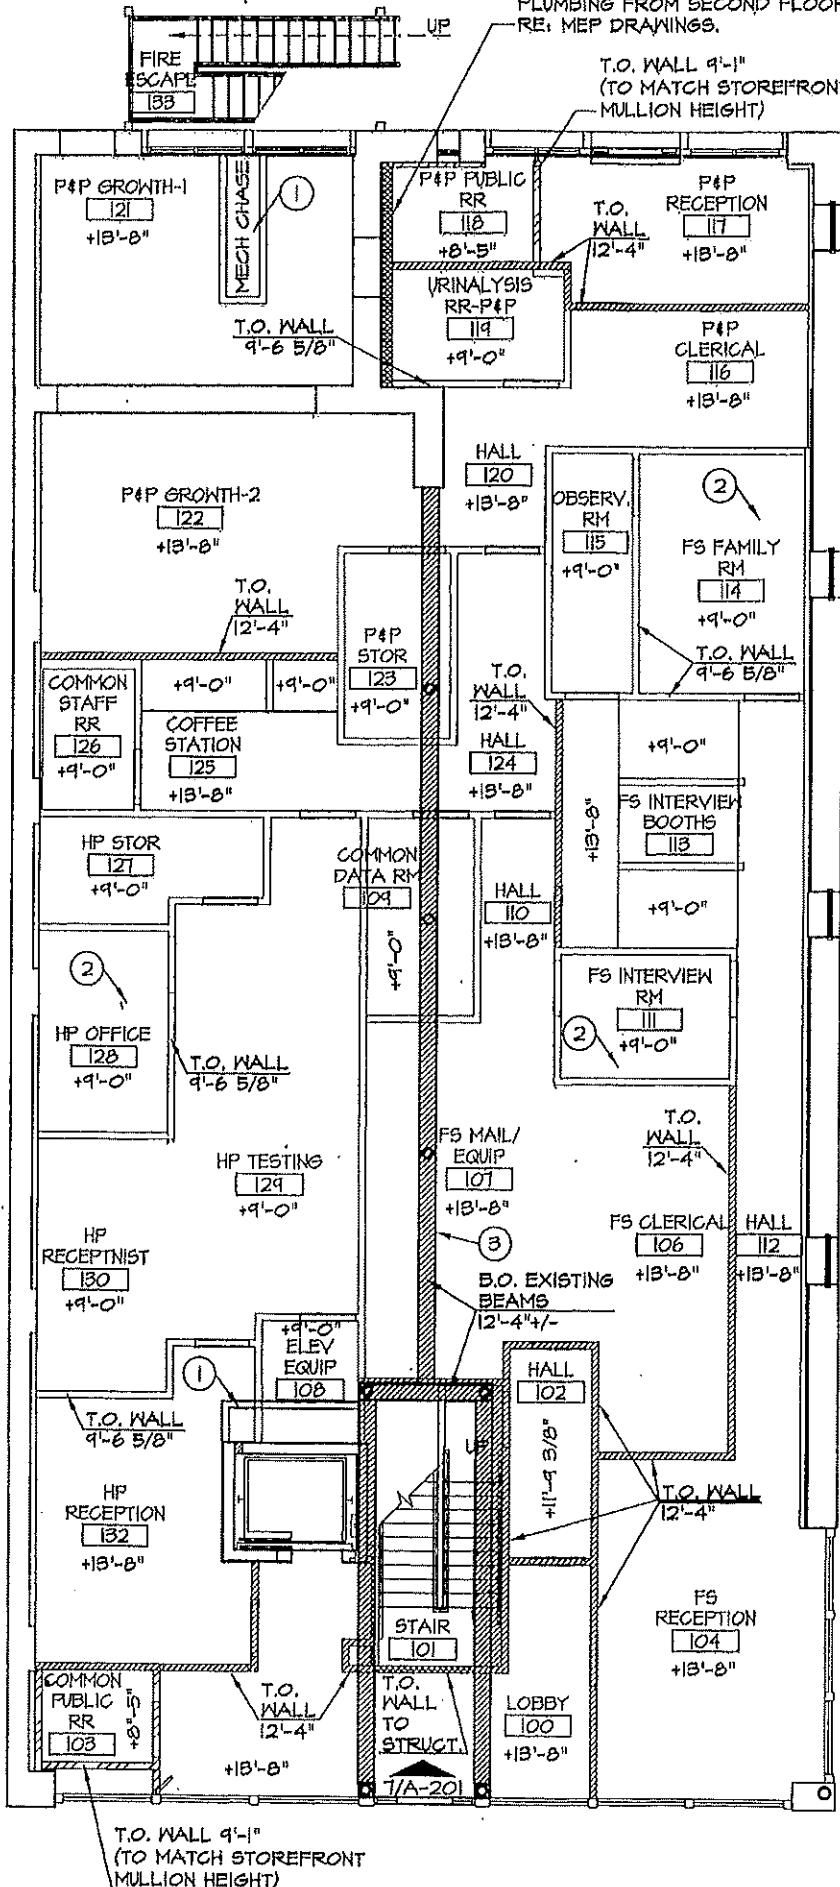

1 FIRST FLOOR REFLECTED CEILING PLAN

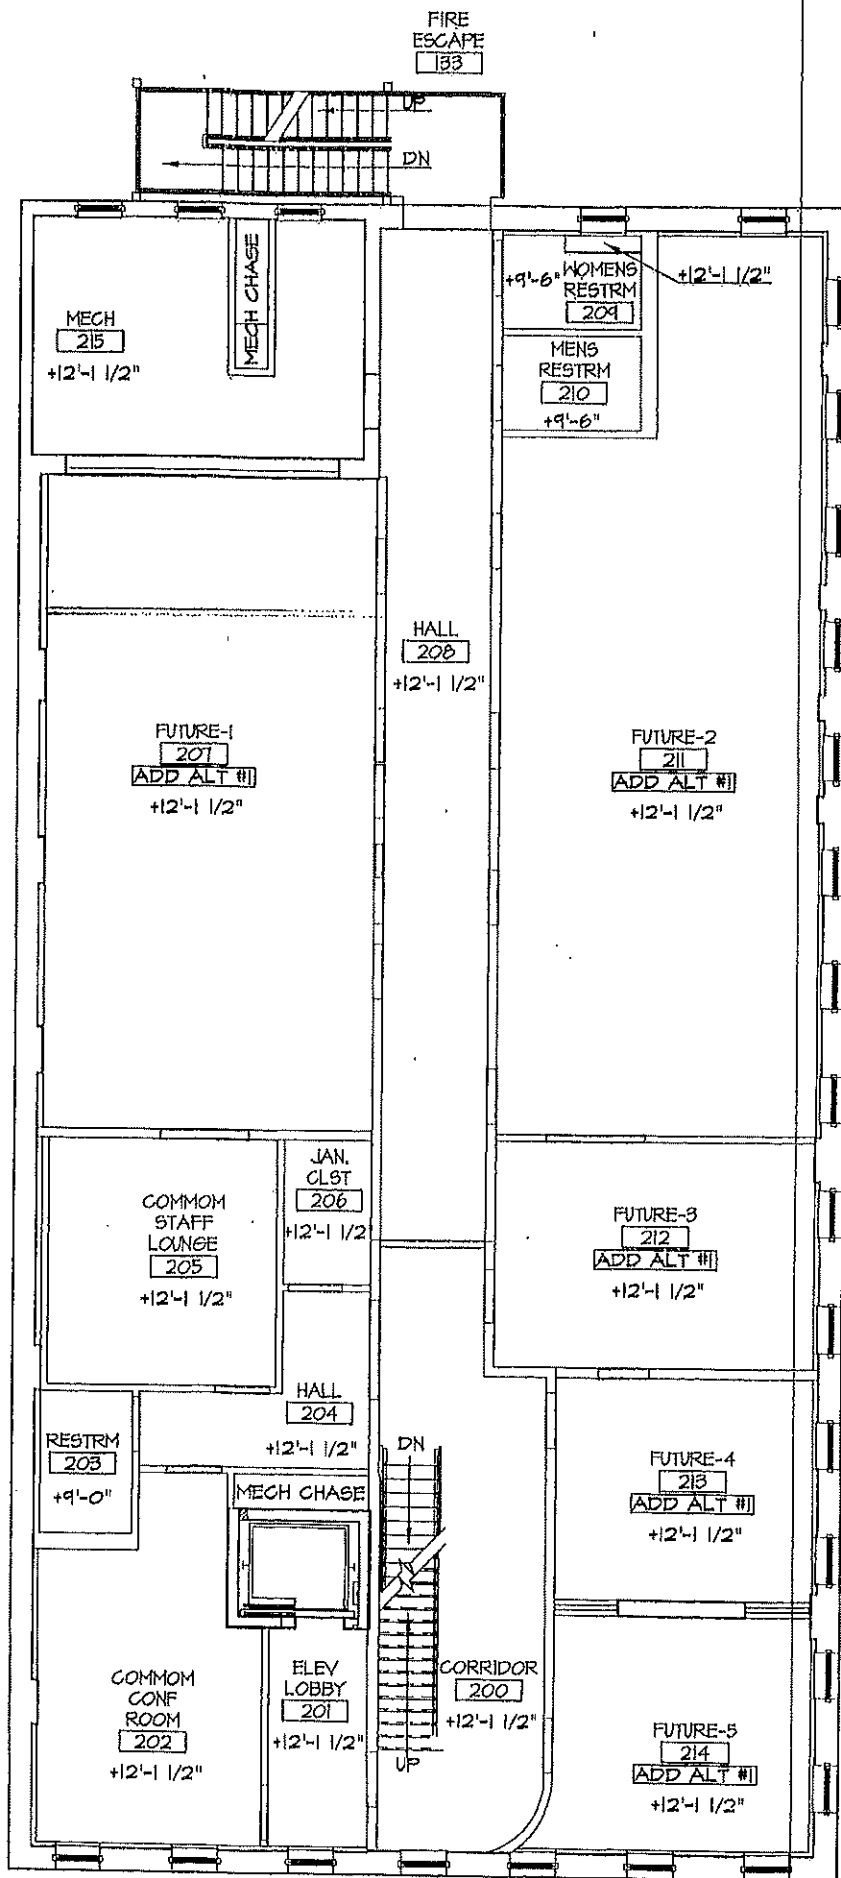

2 SECOND FLOOR REFLECTED CEILING PLAN

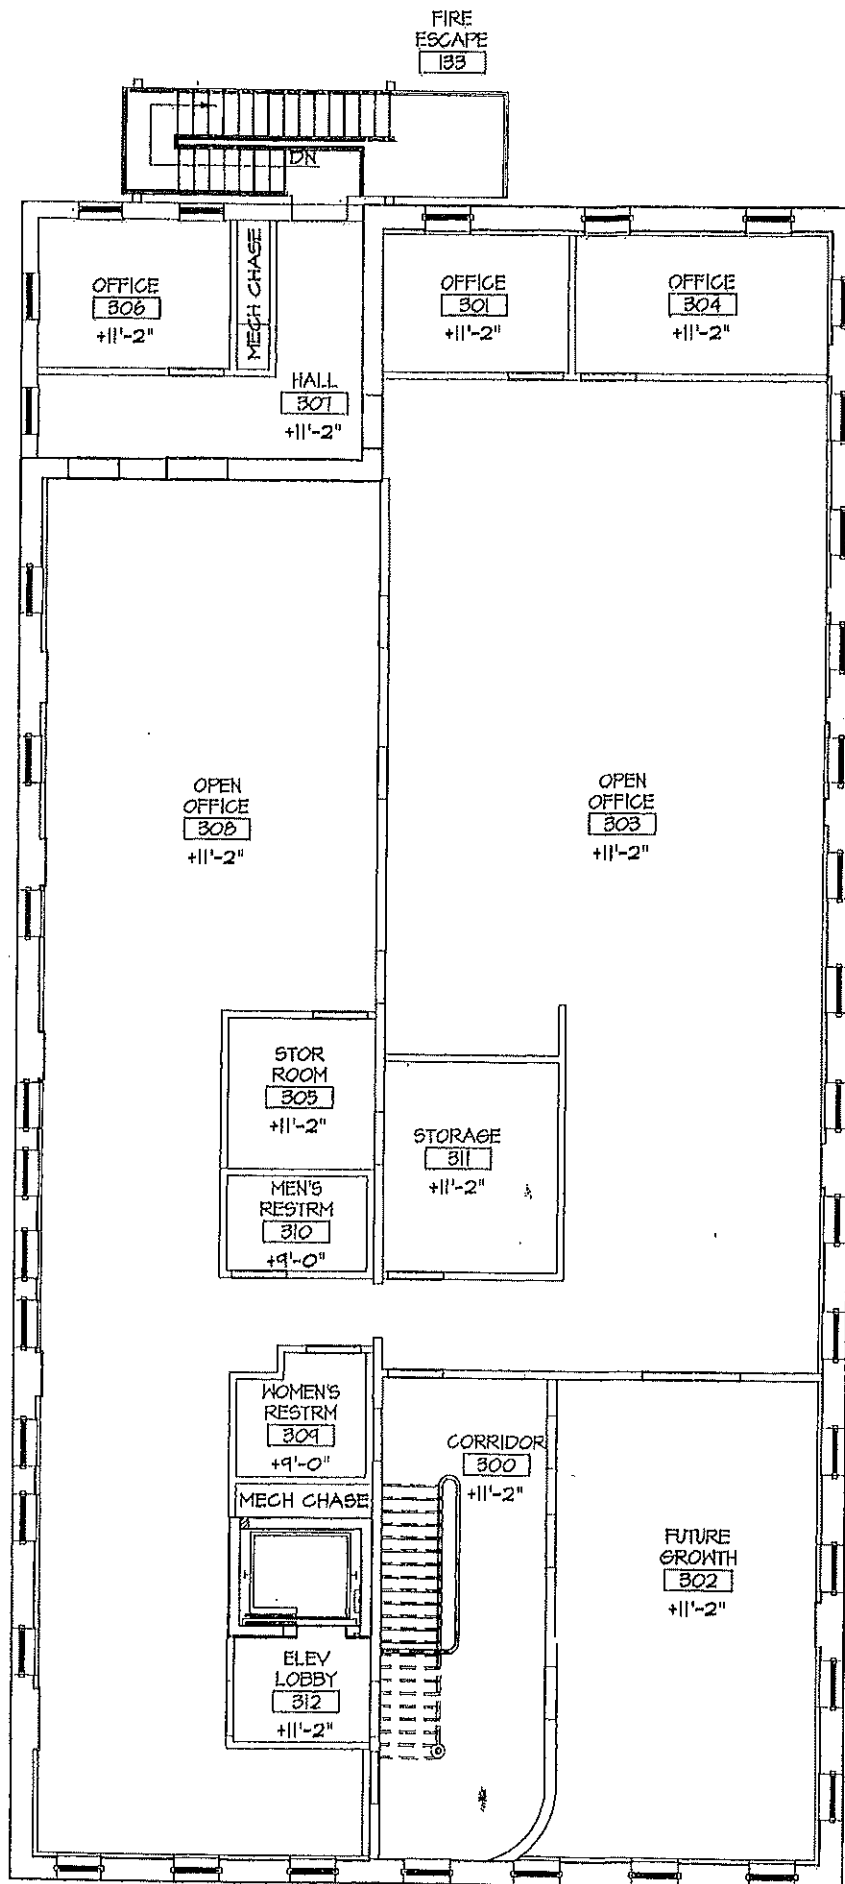

2 THIRD FLOOR REFLECTED CEILING PLAN